

SLV 1003507

Entnahme Lichtquelle zur Überprüfung / Removal of light source for verification
Ausbau Betriebsgerät zur Entsorgung / Removal of Control Gear for disposal

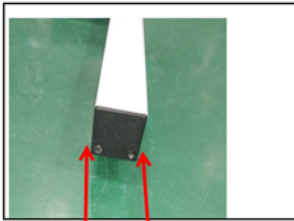


Figure1
Remove the screws

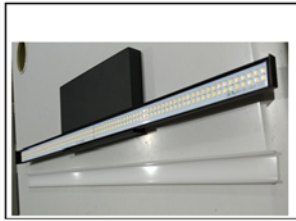


Figure2

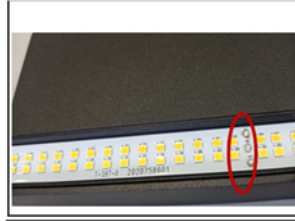


Figure3
Remove the welding spot to take out the PCBA

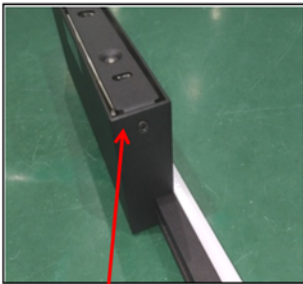


Figure 1
Remove the screws

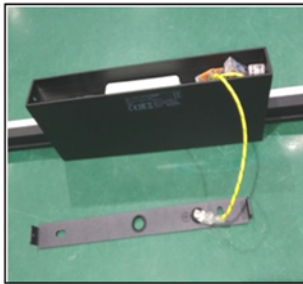


Figure 2



Figure 3
Remove the terminal from the plate



Figure4
Take out the driver

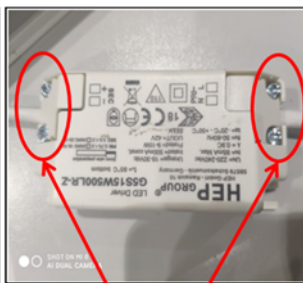


Figure5
Remove the screws



Figure6
Remove the wires